

# **ARB** **BASE RACK**

## **FITTING INSTRUCTION**

Part Number:  
**17925010**

Suits BASE RACK:  
**1770040**

Product Description: **BASE RACK fitting kit suits Land Cruiser 300 series**

## **WARNING**

### **NOTE THE FOLLOWING:**

- ◆ Vehicle accessories which are not properly fitted can be dangerous.
- ◆ Please read these instructions carefully prior to fitting, and comply with the instructions at all times
- ◆ If in any doubt please contact your nearest ARB state office or the stockist from whom it was purchased.
- ◆ Do not use this product for any vehicle make or model, other than those specified by ARB.
- ◆ This product or its fixing must not be modified in any way.
- ◆ The installation of this product may require the use of specialized tools and/or techniques
- ◆ It is recommended that this product is only installed by trained personnel
- ◆ These instructions are correct as at the publication date. ARB Corporation Ltd. cannot be held responsible for the impact of any changes subsequently made by the vehicle manufacturer
- ◆ During installation, it is the duty of the installer to check correct operation/clearances of all components
- ◆ Work safely at all times
- ◆ Unless otherwise instructed, tighten fasteners to specified torque
- ◆ Check bolt torque after 500km & at regular service intervals

## **ARB 4x4 ACCESSORIES**

### **Corporate Head Office**

42-44 Garden St  
Kilsyth, Victoria  
AUSTRALIA 3137

Tel: +61 (3) 9761 6622  
Fax: +61 (3) 9761 6807

Australian enquiries  
North & South American enquiries  
Other international enquiries

sales@arb.com.au  
sales@arb.com.au  
exports@arb.com.au

**www.arb.com.au**

# SAFETY

## NET PAYLOAD FOR YOUR BASE RACK

The net payload for your BASE RACK is calculated by subtracting the weight of the BASE RACK and the vehicle mounting kit from the vehicle's roof capacity.

The vehicle's roof load capacity may vary between models and driving conditions. Refer to vehicle owner's manual for model and condition specific roof load capacities.

Kit	BASE RACK	Vehicle roof capacity* (kg/lb)	BASE RACK + mount kit (kg/lb)	BASE RACK net payload (kg/lb)
17925010	1770040	100 / 220	30 / 66	70 / 154

\* Maximum roof load capacity. Refer to vehicle owner's manual for model and condition specific roof load capacities.

It is important to follow the listed usage instructions;

- ◆ Maximum load per BASE RACK beam is 25kg.
- ◆ Load must be evenly distributed and adequately secured.
- ◆ Any weight carried on the roof of the vehicle will adversely affect its handling, particularly in cornering or in a cross-wind, the vehicle should therefore be driven with increased discretion.
- ◆ Regularly check the tightness of the securing clamps and the security of the load.
- ◆ Attention is directed to statutory requirements regarding maximum permissible projections from vehicles.

All bolts should be checked prior to touring to ensure the tray is fastened correctly

## **GENERAL CARE AND MAINTENANCE**

By choosing an ARB BASE RACK, you have bought a product that is one of the most sought after 4WD products in the world. Your BASE RACK is a properly engineered, reliable, quality accessory that represents excellent value. To keep your BASE RACK in original condition it is important to care and maintain it following these recommendations:

- As part of any pre-trip preparation, or on an annual basis, it is recommended that a thorough visual inspection of the BASE RACK is carried out, making sure that all bolts and other components are torqued to the correct specification. Replace any components as necessary.

Please contact local Authorised ARB Stockist if you would like to have this service carried out on your behalf.

## FITTING REQUIREMENTS

### REQUIRED TOOLS FOR FITMENT OF PRODUCT:

Allen key set	13mm spanner x 1
Pen/pencil	Torx key set
Tape measure	Socket set

**NOTE: 'WARNING' notes in the fitting procedure relate to OHS situations, where to avoid a potentially hazardous situation it is suggested that protective safety gear be worn or a safe work procedure be employed. If these notes and warnings are not heeded, injury may result.**

### FASTENER TORQUE SETTINGS:

SIZE	Torque Nm	Torque lbft
M6	9Nm	7lbft
M8	22Nm	16lbft

## Air Deflectors and Base Rack Light Bar

By default (Without Light Bar):

 
 

Both main and upper Air Deflectors should be fitted to the BASE RACK. Instructions are in the following pages.

When using a BASE RACK Light Bar (part number **1780500**):


It is recommended to fit the Light Bar in front of the BASE RACK, together with the main Air Deflector. Do not assemble the upper Air Deflector in this configuration.

The Light Bar can also be fitted beneath the front edge of the BASE RACK in place of the main Air Deflector. It may however result in increased levels of noise.

Refer to the instructions provided with this product for further details.

		PART NUMBER
AIR DEFLECTOR (MAIN)		<b>3753263</b> Included
UPPER AIR DEFLECTOR		<b>6191163</b> Included
BASE RACK LIGHT BAR		<b>1780500</b>

## DIAGRAM

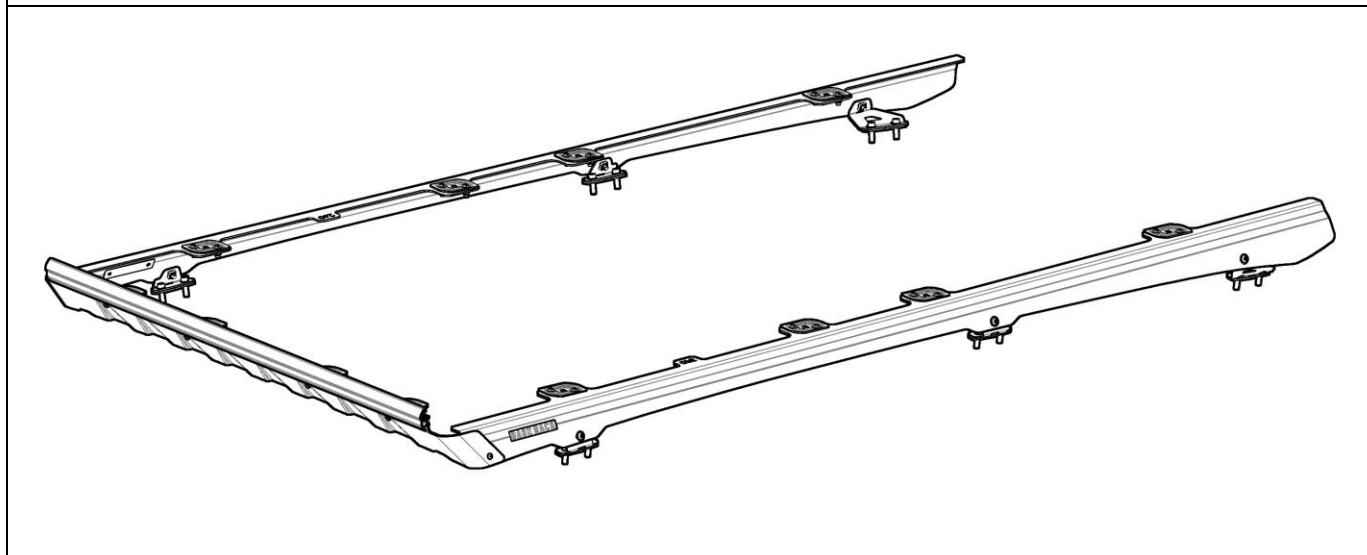

## PARTS LISTING 17925010

PART NO.	PICTURE	QTY	DESCRIPTION
<b>APPLICATION – MOUNTING BRACKETS TO ROOF</b>			
3753261R		2	MOUNTING BRACKET W/ WELD NUT – MID LEFT & FRONT RIGHT
3753261L		2	MOUNTING BRACKET W/ WELD NUT – MID RIGHT & FRONT LEFT
3753262R		1	MOUNTING BRACKET W/ WELD NUT – BACK RIGHT
3753262L		1	MOUNTING BRACKET W/ WELD NUT – BACK LEFT
6151184		12	M8 X 1.25 X 30MM SOCKET HEAD CAP
4584415		12	M8 WASHER FLAT - BONDED
5848516		6	RUBBER PACKER

Last Rev Date: 05/09/2022

 


 
 
 


 
 
 
 
 
 

 
Page 4 of 17

 

 
 

 
 
Fitting instructions# 37801103

© 2020 ARB Corporation Ltd. If you have any queries regarding the installation of this product please contact the distributor from whom it was purchased, or alternatively the ARB office in your state.

Head Office – ARB Corporation Ltd VIC: 42-44 Garden Street, Kilsyth, Victoria, 3137 Tel: (03) 9761 6622 Fax: (03) 9761 6807


ACT: (02) 6280 7475 NSW: (02) 9821 3633 NT: (08) 8947 2262 QLD: (07) 3872 3872 SA: (08) 8244 5001 TAS: (03) 6331 4190 WA: (08) 9244 3553

6151934		1	TORX ALLEN KEY
<b>APPLICATION – BLADE BRACKETS TO MOUNTING BRACKETS</b>			
3753260L		1	BLADE BRACKET LC300 2125 LEFT
3753260R		1	BLADE BRACKET LC300 2125 RIGHT
6151924		6	M8 X 1.25 X 20 BUTTON HEAD TORX – BLK
4581085		6	M8 WASHER FLAT – BLACK
<b>APPLICATION – BASE RACK TO BLADE BRACKETS</b>			
3195184		8	M8 STUD PLATE
6151921		16	M8 X 20 STUD - BLACK
6151212		16	M8 X 1.25 NYLOC NUT - BLACK
4581085		16	M8 WASHER FLAT - BLACK
<b>APPLICATION – BASE RACK TO AIR DEFLECTOR</b>			
3753263		1	AIR DEFLECTOR (MAIN)
3195184		4	M8 STUD PLATE
6151921		4	M8 X 20 STUD - BLACK
6151212		4	M8 X 1.25 NYLOC NUT - BLACK
4581085		4	M8 WASHER FLAT - BLACK
3752747		4	AIR DEFLECTOR MOUNT BRACKET
6151475		4	M6 U-NUT

6151459		4	M6 x 16 BUTTON HEAD HEX - BLACK
4584329		4	M6 FLAT WASHER - BLACK
<b>APPLICATION – AIR DEFLECTOR TO BLADE BRACKETS</b>			
6151300		2	M6 CAGE NUT
6151459		2	M6 x 16 BUTTON HEAD HEX - BLACK
4584329		2	M6 FLAT WASHER - BLACK
4581082		2	M6 FLAT WASHER LARGE - BLACK
<b>APPLICATION – BASE RACK TO UPPER AIR DEFLECTOR</b>			
6191163		1	UPPER AIR DEFLECTOR

**BEFORE STARTING, READ ALL STEPS OF THE INSTRUCTIONS CAREFULLY AND CHECK ALL PARTS**

**STEP 1: REMOVAL OF CHANNEL COVERS OR ROOF BARS**

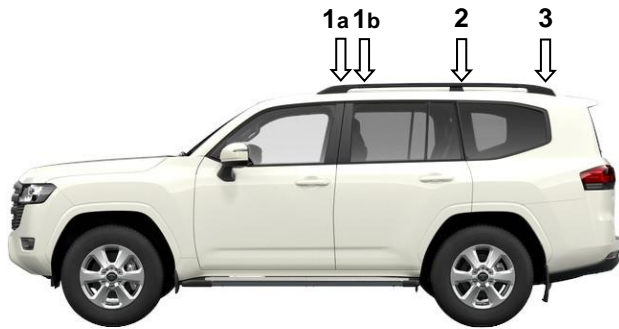

If fitted, remove factory roof rails (see below).

If not, remove all but 1b flat plastic covers from the vehicle's roof channels (see below).

BASE RACK installation will use anchor points 1a, 2 and 3.

Anchor point 1b should stay covered.




1. To remove factory roof rail end caps, unclip base from the bottom up by pulling outward with a panel remover, then slide out horizontally.




To remove factory roof rail middle caps, unclip by pulling from the back of the rail.

You can then unscrew the central bolt (12mm socket).

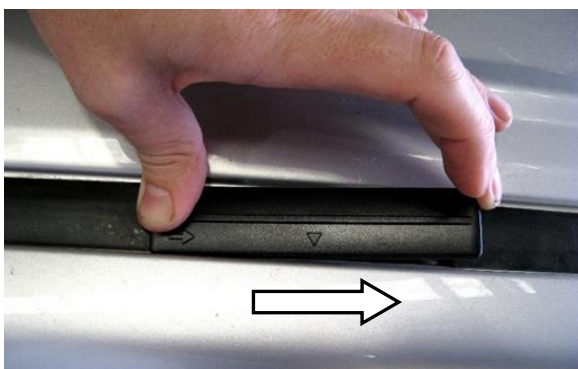

To remove flat plastic covers, push in the direction of the arrows and then lift the opposite end up.

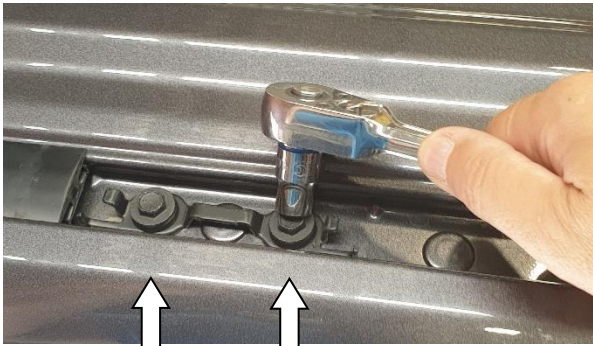

2. Remove all the brackets from the roof (except for anchor point 1b).

Use 12mm socket for front and back factory roof rail brackets. Use 10mm socket for all other brackets.

Discard plastic covers, rails, brackets & fasteners.




**IMPORTANT NOTE:**

Anchors are sleeved with a thin plastic tube.

When removing or installing brackets, be careful **NOT TO PUSH THE TUBES DOWN.**


The anchors are connected to these tubes and will easily come loose with them.

**STEP 2 – ATTACH MOUNTING BRACKETS TO ROOF**

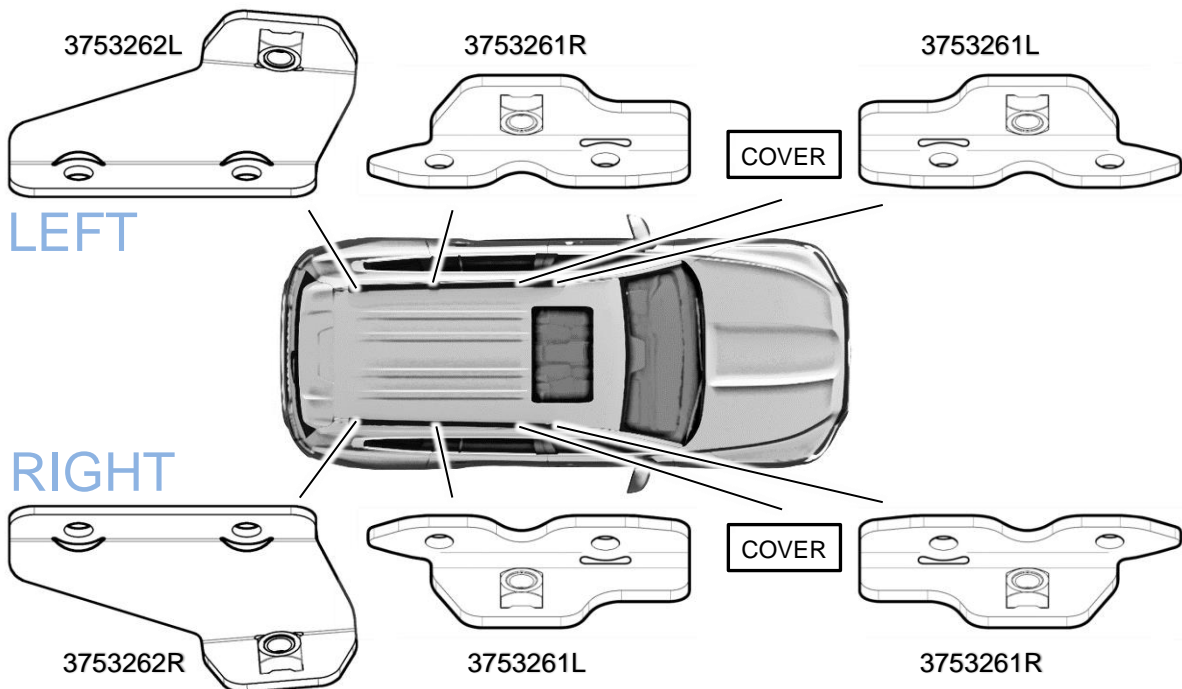

**MOUNT BRACKETS DIAGRAM**



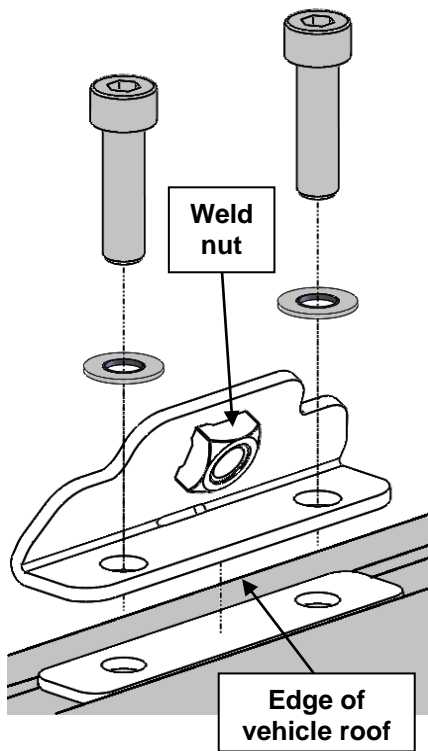

1. Place a rubber packer carefully (see step 1's note) over each of the sets of holes in the roof channels.
2. -Position the mounting brackets following the mount brackets diagram, so that the weld nuts are facing towards the centre of the vehicle.


-Attach each bracket to the roof mounting points using M8 x 30 Socket head screws and M8 Bonded washers. See image.

Note: Mount Brackets are not meant to sit parallel to the car's roof channels. Align holes, not sides of brackets.

-Tighten screws to specified torque




**Torque M8 to 22Nm**

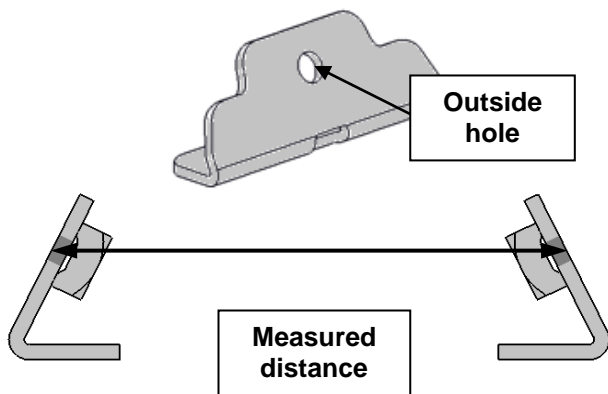


3. Using a tape measure, measure across the vehicle between the middle of the hole on the outside face of the front and rear set of mounting brackets. Make a note of each measurement.

Position	Distance
Front	
Rear	


### STEP 3 – ASSEMBLE BASE RACK WITH BLADE BRACKETS

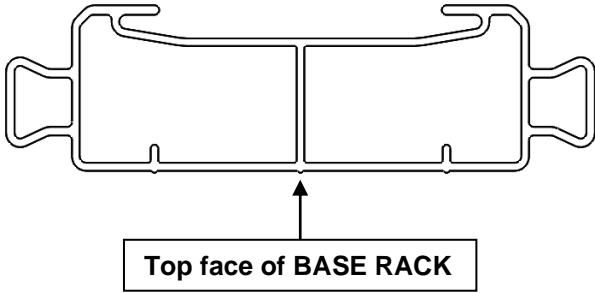


1. Place the BASE RACK face down on a clean flat surface. Provide protection to the top face of BASE RACK to avoid marking of surfaces

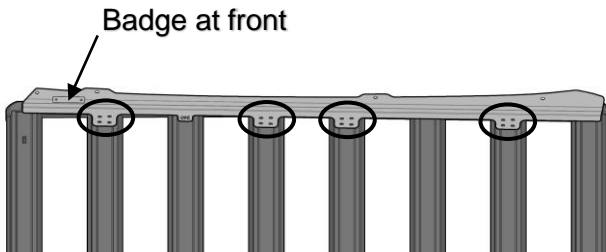


2. Check the position of the mounting plates (circled in image) on the blade brackets in relation to the channels on the BASE RACK.

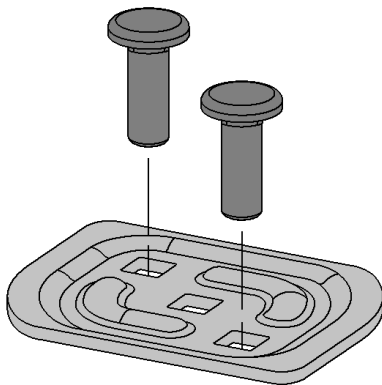


3. Insert 2, M8 x 20 Studs into each of the Stud Plates as shown.

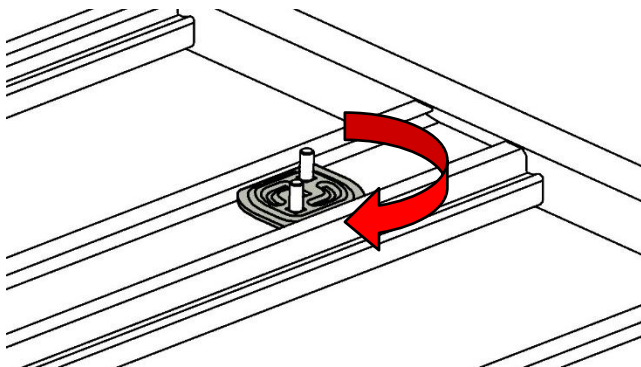



4. Insert the assembled stud plates into the correct BASE RACK channels. Rotate the plates 90 degrees.

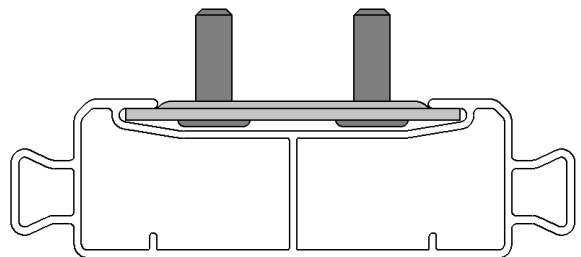

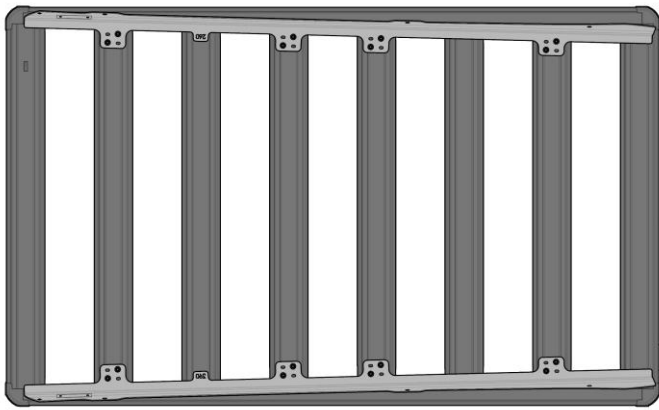

5. Flip the blade brackets over so they are upside down and carefully place on top of the BASE RACK. When doing so ensure the M8 studs in the stud plates go through the slots. Then secure the blade brackets to the BASE RACK using M8 flat washers and nyloc nuts.

Do not fully tighten, allowing each blade to move.

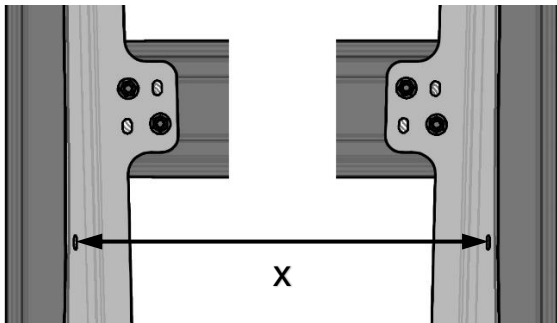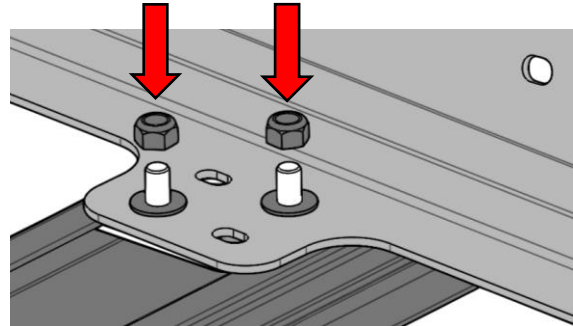


6. Using the previously recorded measurements, adjust the location of the blade bracket on the BASE RACK. Ensure the distance between the blade bracket and the edge of the tray is the same on both sides. Fully tighten all M8 Nyloc nuts



**Torque M8 to 22Nm**

## STEP 4 – ASSEMBLE AIR DEFLECTOR

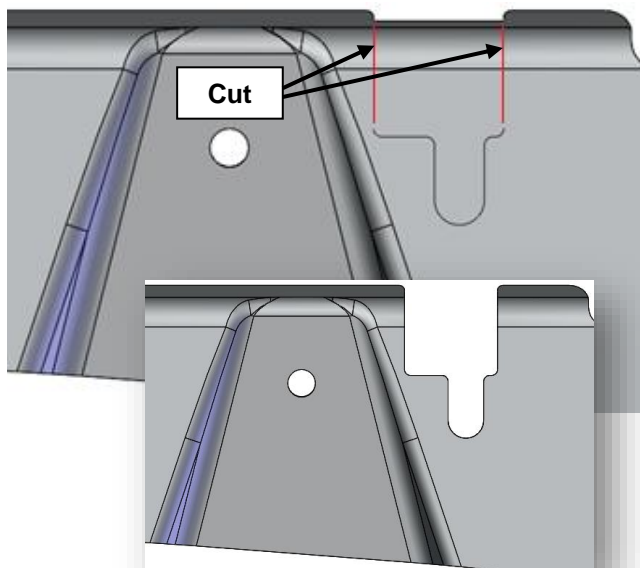



### OPTIONAL: LIGHTBAR FITMENT

If fitting the Air Deflector together with a front mounted BASE RACK Light Bar, the Air Deflector needs to be modified as described.

Refer to the instructions provided with the BASE RACK light bar for details on installing the light bar.


For wiring, refer to vehicle specific information page 16.

 1. -Make 4 cuts in the air deflector between the notches in the top edge and the laser cut shape as shown.  
-Discard the material removed.  
-Remove any sharp edges and paint raw edges with black touch-up paint.

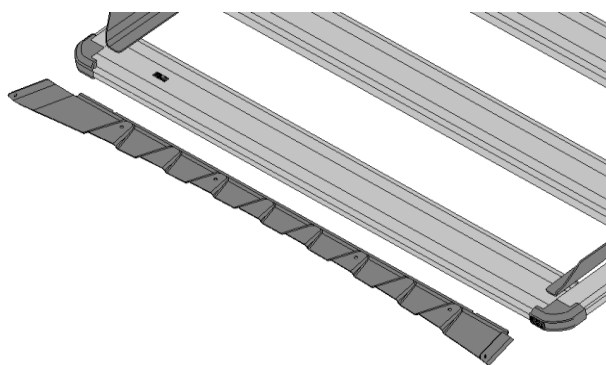


Note: BASE RACK should be upside down with the vehicle mount brackets fitted.


2. Lay the air deflector face down, parallel with the front of the BASE RACK. This will help determine the general position for the stud plates. Ensure the distance between the end of the deflector and outside of the tray is the same on both sides.

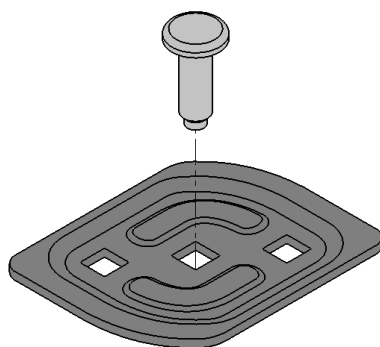


3. Insert one M8 x 20 Stud into each of the Stud Plates as shown.

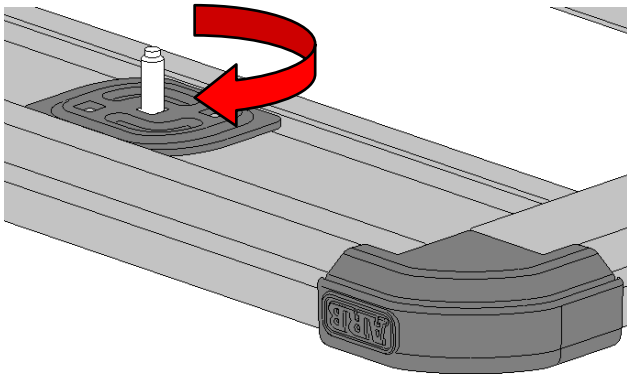


4. Flip the plate over and insert each of the 4 assembled stud plates into the front channel of the BASE RACK. Rotate 90 degrees and ensure the axis of the bolt lines up with the holes in the air deflector.

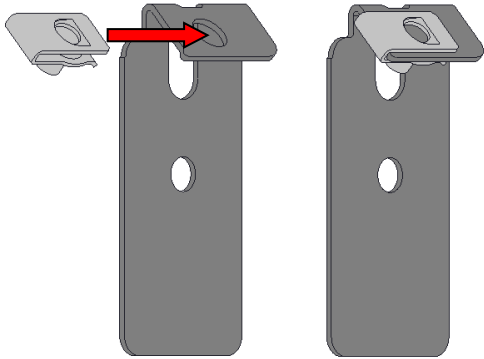


5. Snap one u-nut onto each of the 4 air deflector mounting plates. Take care to ensure the u-nut is oriented correctly. See image.

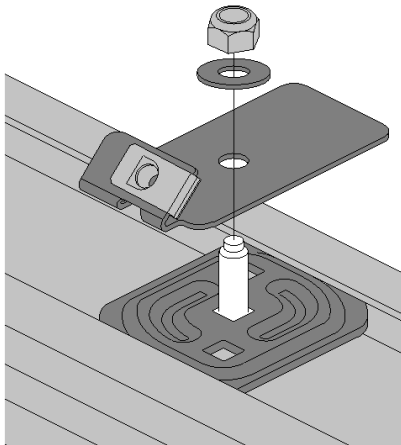


6. Attach the air deflector mounting plates to the stud plates with an M8 flat washer & nyloc nut.  
Leave nut loose enough to allow assembly to slide along channel.

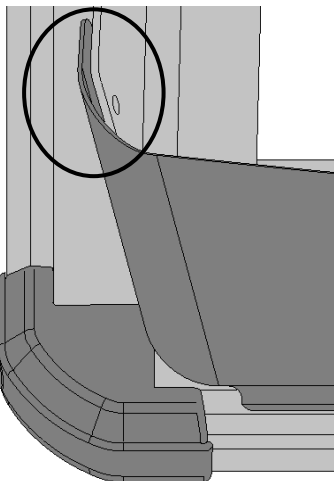

7. Flip the air deflector over and offer it up to the assembled BASE RACK and blade brackets.  
Ensure the folded ends of the deflector are outside the ends of the blade brackets.  
The holes in the front of the air deflector should line up closely with the u-nuts of the previous step.

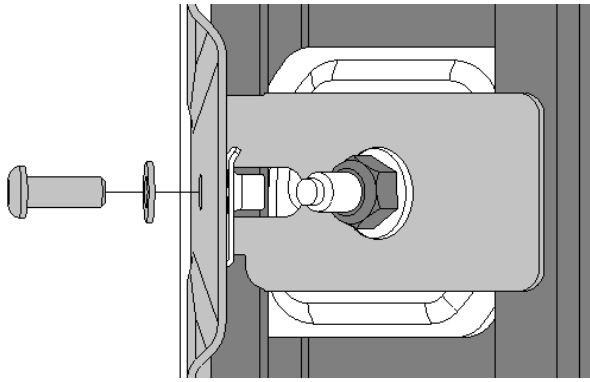

8. Secure each of the 4 mounting plates to the air deflector. Use the M6 Button head screws and black M6 washer (part# 4584329) as shown.

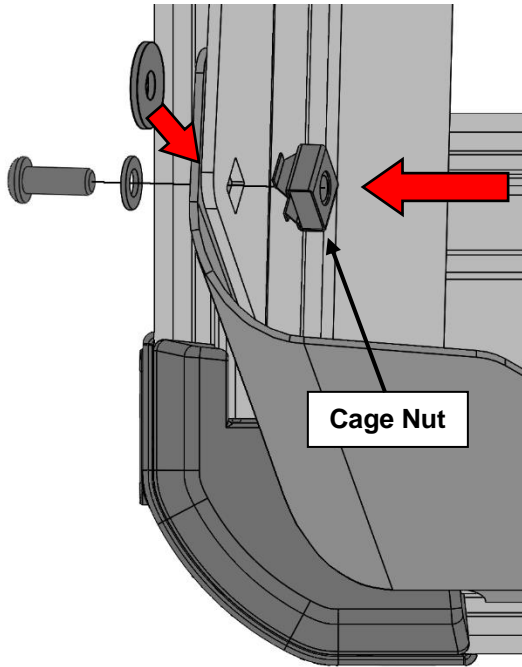


9. Install cage nut in location shown.  
Place the large M6 washer (4581082) between the blade and the air deflector (You can use tape to hold the washer in place) and secure using the remaining M6 Button head screws, M6 washers (4584329), as shown.

10. Tighten all screws to specified torque.


 Torque M8 to 22Nm


 Torque M6 to 9Nm

Fitted

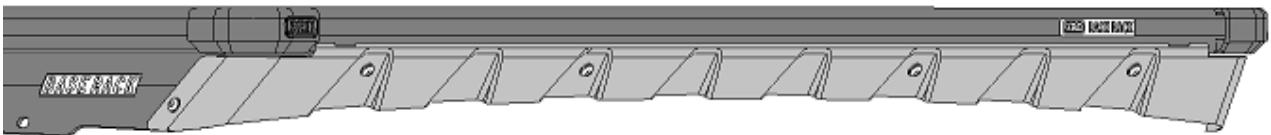

Fitted with the optional Light Bar (in front of deflector)

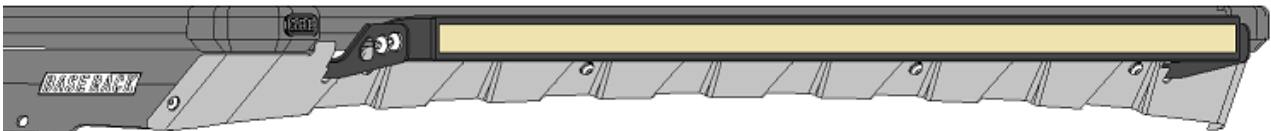


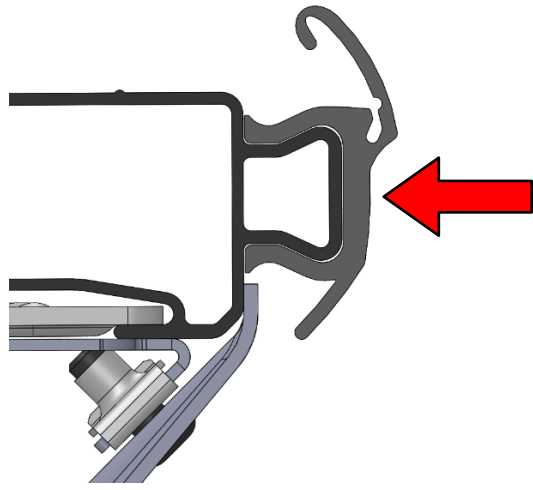

Do not install Upper Air Deflector when fitting a front Light Bar.


11. Flip the BASE RACK assembly the right way up on a clean surface. Provide protection to the blade brackets of the BASE RACK to avoid marking the edges.
12. Clip Upper Air Deflector on the front dove tail above the main Air Deflector. If required, unscrew one of the corner caps of the BASE RACK and slide the Deflector in from the side.

### STEP 5 – ASSEMBLE BASE RACK TO ROOF

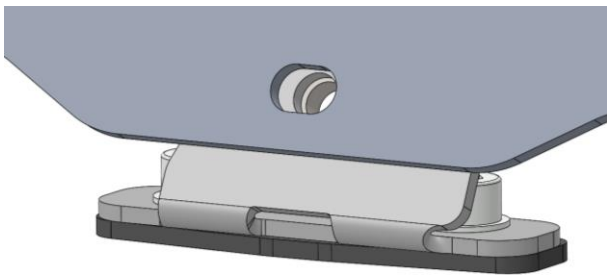


1. With assistance, carefully place the BASERACK on the vehicle so the inside of the blade brackets rests on the outside of the mounting brackets. The entire BASERACK assembly should be clear of the vehicle roof. All mounting holes/slots should align closely.

Note: Place protective material on roof to reduce the risk of accidental damage to vehicle when mounting the BASERACK to the vehicle.

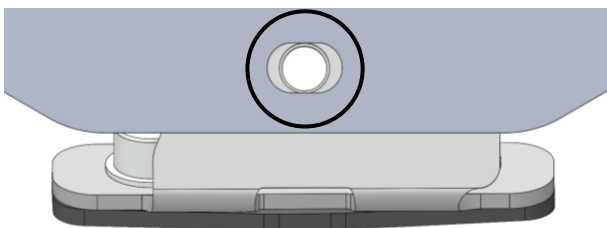

2. Confirm BASE RACK is correctly aligned to vehicle. If it is not, it is recommended to remove the BASE RACK from the vehicle roof and repeat the mounting process from the measurement step.

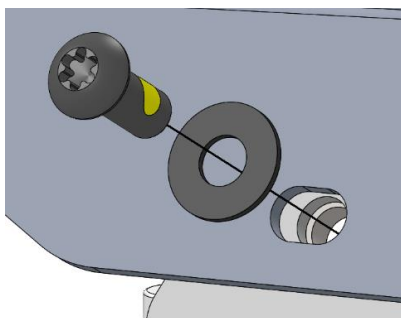

3. Use the M8 Button head Torx screws and M8 Black washers to secure the roof tray to the roof mounting brackets. Tighten all screw to the specified torque.




**Torque M8 to 22Nm**



## OPTIONAL STEP FOR BASE RACK WIRING KIT

(1780400 & 1780410 SOLD SEPARATELY)


These steps are a vehicle specific supplement to the main instruction. This instruction should be used in parallel. Read and both instructions before proceeding

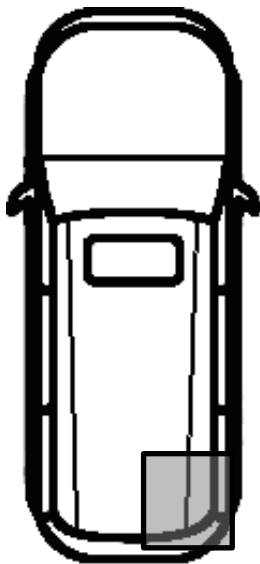


1. The recommended location for the wiring kit for this vehicle is the rear, right hand side
2. The location provided has been chosen to provide a safe passage away from vehicle components (airbags, vents, etc) and integrated to the rack

**! CAUTION – THIS STEP MAY REQUIRE WORK IN THE PROXIMITY OF CURTAIN AIR BAGS !**



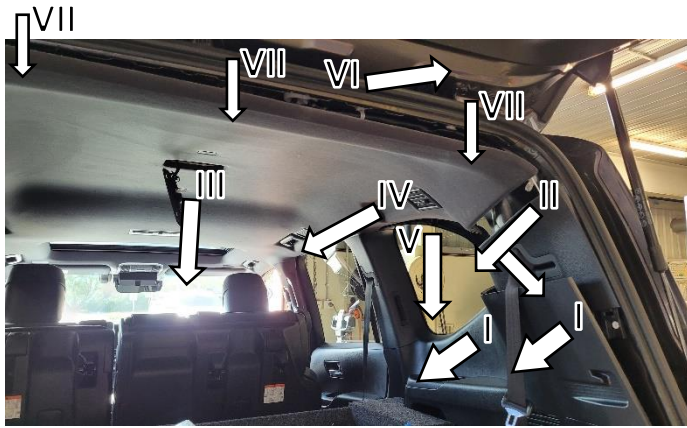

3. To lower the headliner:
  - I. Pull back the rear right lower trim
  - II. Pull back the rear right upper D pillar trim, and drop behind lower
  - III. Remove the interior light
  - IV. Remove the right rear grab handle
  - V. Pull down and remove the rear window upper trim
  - VI. Peel the seal back around the headliner
  - VII. Pull down the head liner from the rear

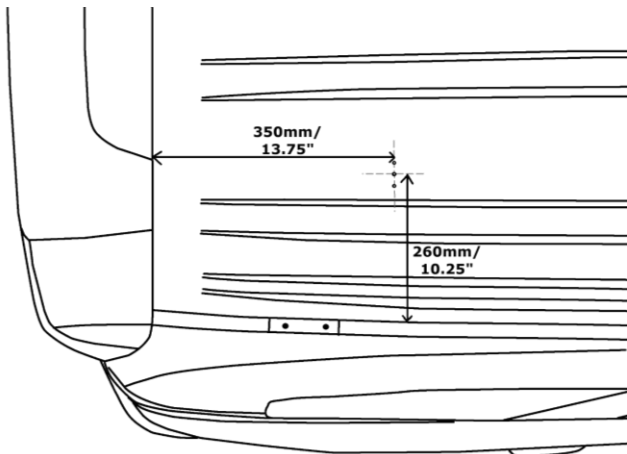

4. Measure carefully the hole locations shown
5. Peen the holes and double check location clears interior components by touching/viewing the marks on the inside
6. Drill the roof and install the roof grommet according to the instructions provided with the kit.
7. Run the loom backward towards the original loom. Secure the loom with cable ties, keeping away from sharp objects, airbag components and seatbelt components