



FITTING INSTRUCTIONS

PART NUMBER: SLB12020.

DESCRIPTION: SLB MNT KIT SUITS LC79 SC 07+

NOTES:

- ◆ This product must be installed exactly as per these instructions.
- ◆ The installation of this product may require the use of specialised tools and/or techniques.
- ◆ It is recommended that this product is only installed by trained personnel.
- ◆ These instructions are correct at the date of publication. ARB Corporation Ltd. cannot be held responsible for the impact of any changes subsequently made by the vehicle manufacturer.
- ◆ During installation, it is the duty of the installer to check correct operation/clearances of all components.
- ◆ Ensure all electrical connections are correct and tight with good earth connection to the engine and/or chassis. Failure to do this may result in component failure or fire.
- ◆ Make sure all wires are securely fastened away from any hot, sharp or moving surfaces. Do not fasten any wires to the brake lines or fuel lines.
- ◆ Make sure that all electrical connections are strong and well insulated.
- ◆ Work safely at all times.

BOM.

Part Number	Description	Quantity
37500115	Mounting Bracket LC79SC 12+	1
6152273	Nutsert M8	6
6151021	Bolt M8 20mm	6
6151765	Bolt M8 65mm	4
6151017	Bolt M6x16mm	3
4581044	Washer M8	10
4584369	Washer M6	3
6151650	Screw M5 x 20mm	2
4300100	Wiring Kit Batt Slimline Input	1

Fastener Torque Settings.

SIZE	Torque Nm	Torque lbft
M5	6	4.5
M6	9	7
M8	22	16

Table 1.

ARB 4x4 ACCESSORIES

Corporate Head Office

42-44 Garden St
Kilsyth, Victoria
AUSTRALIA, 3137

Tel: +61 (3) 9761 6622
Fax: +61 (3) 9761 6807

Australian enquiries
North & South American enquiries
Other international enquiries

sales@arb.com.au
sales@arbusa.com
exports@arb.com.au

www.arb.com.au



Do not pull on the wiring harness forcefully



Do not connect wiring harness to engine



Ensure all connections are tight and pushed home

FITTING PROCEDURE:

1. Disconnect the start battery negative (-ve) terminal, then the positive (+ve) terminal.
2. Fold down seats to gain access to the rear cabin wall.
3. Remove four retaining screws securing the storage shelf. Put shelf aside with screws for later installation onto the Mounting Bracket.




4. Remove vehicle grommet from cabin floor.
5. Temporarily install the Mounting Bracket. The Mounting Bracket LH floor hole should align with the floor grommet as indicated.
6. To ensure the bracket is correctly located, fasten the bracket with the three existing vehicle points shown.
7. Mark the five holes on vehicle cabin as shown.
8. Remove Mounting Bracket.
9. Drill five marked holes and grommet hole to suit Nutsert M8.
10. Take the supplied Nutserts M8 and install in the five drilled holes and one in the grommet hole.

For M8 nutsert, recommended drill size \varnothing 11.0mm.

Three existing vehicle points.



Five holes on vehicle cabin.

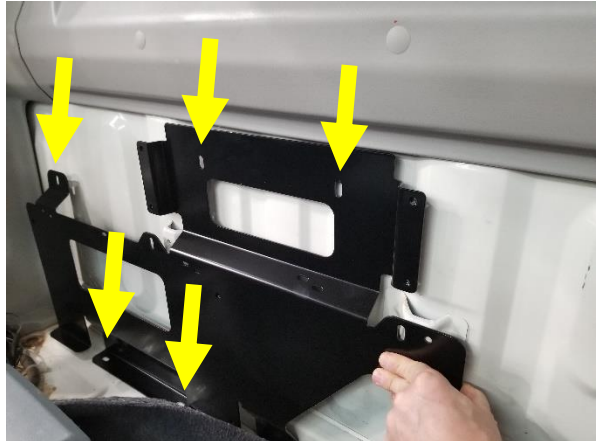

11. Secure Mounting Bracket against the cabin wall with supplied six Bolts M8x20mm and Washers M8.
12. Secure Mounting Bracket with supplied two Bolt M6x16mm and Washers M6.
13. Torque all bolts to required torque setting as per Table 1.



14. To install ARB Slimline battery (sold seperately), place Slimline battery on Mounting Bracket.
15. Install the four Bolts M8x65mm and Washers M8 into the battery mounting holes.
16. Tighten retaining bolts and torque to the required torque setting as per Table 1.



17. Ensure the slimline battery rocker switch is OFF before the harness installation.
18. Locate fuse holder, 60amp fuse, 300mm cable and 6.0m cable from kit.
19. Install the 60amp fuse into the holder.
20. Install the 300mm cable M5 ring terminal onto the fuse holder.
21. Install the 6.0m cable M5 ring terminal onto opposite end of fuse holder.



22. Route 6.0m cable from vehicle start battery, down beneath the vehicle cabin, up through the cabin floor grommet (as indicated) to the Slimline Battery.
23. Take M8 ring terminals from kit. Cut positive 6.0m cable to required length and crimp the M8 ring terminal onto the cable. Cover with supplied red heat shrink.
24. On battery terminal block, remove fastener labelled "Alt +" and install the positive ring terminal onto the terminal block.
25. Torque to required torque setting as per Table 1.



26. Locate 1.2m cable with ring terminal from kit.
27. On slimline battery terminal block, remove fastener labelled "Alt -" and install the negative ring terminal with cable onto the terminal block.
28. ARB recommend the ground terminal be installed on the old shelf mounting point as indicated. Cut negative cable to required length and crimp the M8 ring terminal from kit onto the cable. Cover with supplied black heat shrink.
29. On the shelf mounting point, secure the ground ring terminal with supplied Bolt M6 and Washer M6.
30. Torque all to required torque setting as per Table 1.
31. Install the positive 300mm cable M8 ring terminal on the vehicle start battery.



Installation of power output cables (sold seperately).

32. Locate fuse holder, 60amp fuse, 300mm cable, 4.0m twin cable from kit.
33. On battery terminal block, remove fastener labelled "Output +" and install the positive 300mm cable ring terminal.
34. On battery terminal block, remove fastener labelled "Output -" and install the 4.0m negative cable ring terminal.
35. Torque all to required torque setting as per Table 1.
36. Install fuse holder on Mounting Bracket with Screws M5x20mm.
37. Install 60amp fuse into fuse holder.
38. Install 300mm positive cable ring terminal onto fuse.
39. Install 4.0m positive cable ring terminal onto opposite end of fuse.
40. For this vehicle, ARB recommend the power output cables exit the vehicle RH rear cabin wall grommet as indicated. Route 4.0m positive cable through grommet to desired location.



41. Using the four original shelf bolts, secure the shelf onto the Mounting Bracket as shown.

42. Torque to required torque setting as per Table 1.




Low Voltage alternator connection.

For this vehicle, its not necessary to connect the Low Voltage terminal to a vehicle ignition source. However, if connection is preferred, complete the Steps below.

43. In the supplied wiring kit, locate the 6.0m blue wire, connect the ring terminal to the Low Voltage terminal as shown.

44. Route the blue wire to a suitable vehicle ignition source and connect accordingly. A suitable ignition source maybe a DC socket or fuse tap into the fuse box.

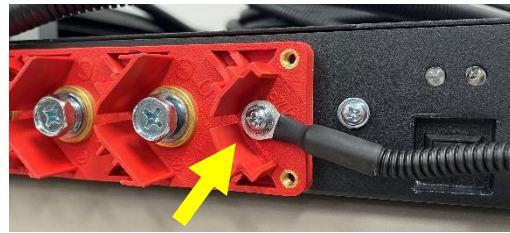

45. Reconnect the start battery positive (+) terminal, then the negative (-) terminal.

46. Turn ON Slimline Battery rocket switch.

47. Check App Connectivity. Connect to the Slimline Battery and confirm the battery status is available via the App.

48. Check LED indicator. The Green LED should illuminate Solid to indicate full charge, or flash (1 flash / 10sec) to indicate the idle state.

49. Check Vehicle Charging. Start the vehicle engine, the Green LED should flash (2 flashes / 5 sec) to indicate the battery is charging.

